

INSTALLATION AND USER GUIDE FOR 20-40-60 DELUXE CONTROL

VÄNEE PART NO. 41301 VENMAR PART NO. 41401

READ AND SAVE THESE INSTRUCTIONS

The illustrations in this document are generic; your control appearance may be slightly different from the ones shown.

⚠ WARNING

Wear safety glasses and gloves while performing these instructions (steps 1 to 5).


This auxiliary control must be paired with the Advanced Touchscreen Control.

INSTALLATION

1 Unplug the ventilation unit.


NOTE: If the control is to be installed in an electric box, go to step **5**.

2 Cut a 2⁷/₈" x 1³/₄" hole in a wall, at a convenient location for the control. See figure at right.

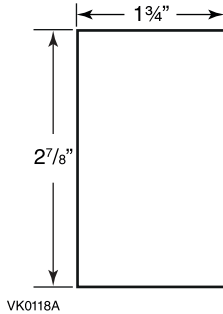


VK0118A

3 Temporarily place the control over the hole and mark both mounting screw hole positions.

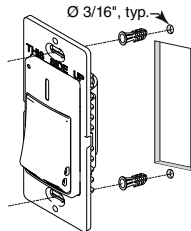

VC0206A

4 Remove the control, drill both screw holes (3/16" Ø) in wall and insert the wall anchors (included).

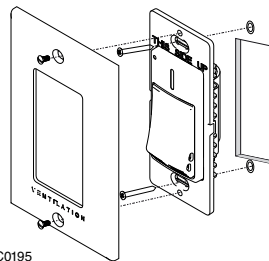

VC0195


5 Mount the control to the wall.

6 Plug the ventilation unit.

7 Disengage the control from its support by lifting and tilting the bottom part of the control.


NOTE: This wall control requires 2 AAA 1.5 V batteries (included).

8 Install the batteries at the back of the control.

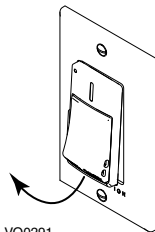

VO0291

9 Keep the auxiliary control in hand. Go to the main control. Reach the Wireless Connection screen (see figure at right) following this path: HOME PAGE (press on the gear at the bottom right)\SETTINGS\INSTALLATION\WIRELESS CONNECTION. Press on the auxiliary control button for 5 seconds. The LED indicator will fade in and out to indicate the system is trying to pair the auxiliary control with the main control. The main control will detect the item. This procedure will take 30 s max. Press on + to complete pairing. Once the pairing is done, the item will move in the upper part of the screen and a ✓ will appear at the left of the item.

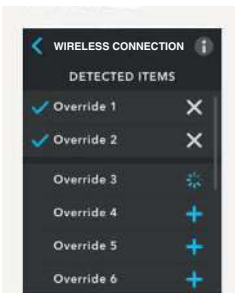

VC0207A


NOTE: It is possible to unpair an item by pressing on x.

10 If needed, reach the Automatic Auxiliary Control screen (see figure at right) following this path: HOME PAGE (press on the gear at the bottom right)\PREFERENCES\AUTOMATIC AUXILIARY CONTROL to modify the humidity detection feature.



VC0208A

11 Install the auxiliary control back in its support. Insert the top brackets in the notches. Push on the bottom part of the control until it clicks in place.

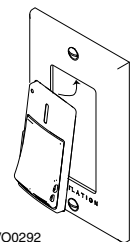

VO0292

12 Test the wall control.

HOW TO USE THE CONTROL



VC0209

The button works following this sequence:

- Click 1 = 20 min
- Click 2 = 40 min
- Click 3 = 60 min
- Click 4 = OFF
- and so on

The indicator lights up as per the selected duration and the system exchanges air at MAX speed.

If the humidity sensor detects a humidity rise, the exhaust fan will activate in MAX speed for a 20-minute, a 40-minute or a 60-minute period as per the Automatic Auxiliary Control setting.

HOW TO CHANGE THE BATTERIES

If a batteries change is required, the low batteries indicator will flash for 5 seconds when pressing on the button.

Perform step **7** to access the batteries.

Remove the old batteries. Dispose of used batteries as per local rules and regulations.

Replace the batteries. The use of rechargeable batteries is not recommended.

Perform step **11** to install the auxiliary control back in its support.

TROUBLESHOOTING

PROBLEM	CAUSE
No detected item on Wireless Connection screen	The batteries are not installed
	Low batteries
LED indicator does not light up when pressing on the button	The batteries are not installed
	Low batteries
	Range too high between the auxiliary control and the main control
Humidity sensor does not work	Low batteries
	Sensitivity too low, set sensitivity to High in the Automatic Auxiliary Control screen

GUIDE D'INSTALLATION ET D'UTILISATION DE LA COMMANDE DELUXE 20-40-60 VÄNÄE PIÈCE N° 41301 VENMAR PIÈCE N° 41401

VEUILLEZ LIRE ET CONSERVER CES DIRECTIVES

Les illustrations de ce document sont générales; l'apparence de votre commande peut légèrement différer de celles-ci.

⚠ AVERTISSEMENT

Porter des lunettes et des gants de sécurité lors de l'exécution de ces instructions (étapes 1 à 5).


Cette commande auxiliaire doit être jumelée avec la commande Avancée à écran tactile.

INSTALLATION


1 Débrancher l'appareil de ventilation.

NOTE: Si la commande est installée dans un boîtier électrique, passer à l'étape 5.


2 Découper un trou de 2 7/8 po x 1 3/4 po dans un mur, à un endroit pratique pour l'emplacement de la commande. Voir ci-contre.

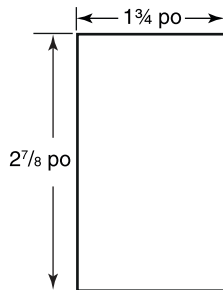


3 Placer la commande temporairement au-dessus du trou et marquer la position des deux trous pour les vis de montage.

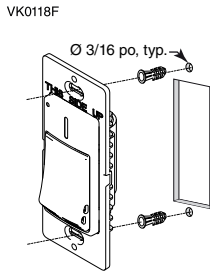

4 Retirer la commande, percer les deux trous (3/16 po Ø) des vis dans le mur et y insérer les douilles à expansion (incluses).

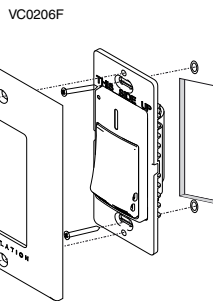

5 Assembler la commande au mur.

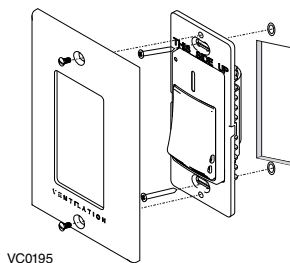


6 Brancher l'appareil de ventilation.


7 Dégager la commande murale de son support en soulevant et en inclinant la partie inférieure de la commande.

NOTE: Cette commande nécessite 2 piles AAA 1,5 V (incluses).

8 Installer les piles à l'arrière de la commande.

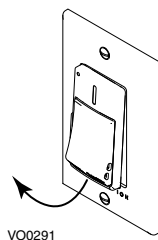

9 Garder la commande auxiliaire en main. Aller à la commande principale. Accéder à l'écran Connexion sans fil (voir ci-contre) en suivant ce chemin: PAGE D'ACCUEIL (appuyer sur l'engrenage dans la partie inférieure droite) \ RÉGLAGES \ INSTALLATION \ CONNEXION SANS FIL. Appuyer sur le bouton de la commande auxiliaire durant 5 secondes. La lumière DEL s'allumera et s'estompera pour indiquer que le système essaie de jumeler la commande auxiliaire avec la commande principale. La commande principale détectera l'élément. Cette procédure prendra 30 s max. Appuyer sur + pour compléter le jumelage. Une fois le jumelage effectué, l'élément se déplacera dans la partie supérieure de l'écran et un ✓ apparaîtra à la gauche de l'élément.

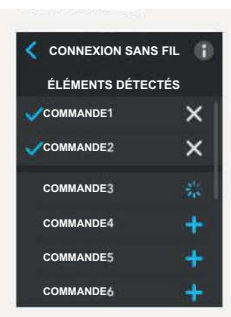


NOTE: Il est possible d'annuler le jumelage d'un élément en appuyant sur x.

10 Si nécessaire, accéder à l'écran Commande auxiliaire automatique (voir ci-contre) en suivant ce chemin: PAGE D'ACCUEIL (appuyer sur l'engrenage dans la partie inférieure droite) \ PRÉFÉRENCES \ COMMANDE AUXILIAIRE AUTOMATIQUE pour modifier l'attribut détection d'humidité.



VC0208F

11 Réinstaller la commande murale dans son support. Insérer les supports supérieurs dans les encoches. Pousser la partie inférieure de la commande jusqu'à ce qu'elle s'enclenche.

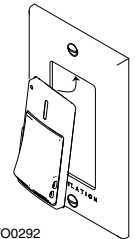

VO0292

12 Tester la commande murale.

COMMENT UTILISER LA COMMANDE

Le bouton fonctionne selon cette séquence:

- Clic 1 = 20 min
- Clic 2 = 40 min
- Clic 3 = 60 min
- Clic 4 = OFF
- et cetera

L'indicateur s'allume selon la durée sélectionnée et le système échange l'air à vitesse MAX.

Si le capteur d'humidité détecte une augmentation du taux d'humidité, le ventilateur d'évacuation s'activera à vitesse MAX durant 20 minutes, 40 minutes ou 60 minutes selon le réglage de la Commande auxiliaire automatique.



VC0209

COMMENT CHANGER LES PILES

Si un changement de piles est requis, l'indicateur de piles faibles clignotera durant 5 secondes au moment d'appuyer sur le bouton.

Effectuer l'étape 7 pour accéder aux piles.

Enlever les vieilles piles. Disposer des piles usagées selon la réglementation locale.

Remplacer les piles. L'utilisation de piles rechargeables n'est pas recommandée.

Effectuer l'étape 11 pour réinstaller la commande auxiliaire dans son support.

DÉPANNAGE

PROBLÈME	CAUSE
Aucun élément détecté à l'écran Connexion sans fil	Piles non installées
	Piles faibles
L'indicateur DEL n'allume pas lorsqu'on appuie sur le bouton	Piles non installées
	Piles faibles
	Distance trop grande entre la commande auxiliaire et la commande principale
Le capteur d'humidité ne fonctionne pas	Piles faibles
	Sensibilité trop basse, ajuster la sensibilité à Élevée à l'écran Commande auxiliaire automatique